


**PARTS LIST
MODEL H3342**


No.	Description	Part No.
1	Switch Cap Kit	41090G-13
2	Switch Guard	13148P-01
3	Push Button Switch	09851P-17
4	Dome, Right	15522P-08
5	Earseal (pair)	18316G-02
6	Dome Filter (1 each)	25629P-05
7	Screw (10/pk)	00023M-11
8	Earphone Assembly	10376G-17
9	PCB Assembly	18289G-13
10	Dome Filter (1 each)	11410P-02
11	Spring Assembly	10117G-97
12	Overhead Cord Kit	22607G-11

No.	Description	Part No.
13	Support Assembly	10370G-03
14	Left Dome	15522P-07
15	Nut and Washer Kit (10 pk)	12052G-02
16	Boom Guide Kit	12840G-01
17	Microphone Cord Assy Kit	10405G-05
18	Microphone Boom Assy	12765G-04
19	DC-1A Microphone w/Cord	12948G-14
20	Communication Cord Assy Kit	18028G-34
21	Screen, Wind, Mic	40062G-06
22	Microphone Cord Assembly	10516G-14
23	DC-1A Microphone	18920G-04

ELECTRICAL SCHEMATIC MODEL H3342

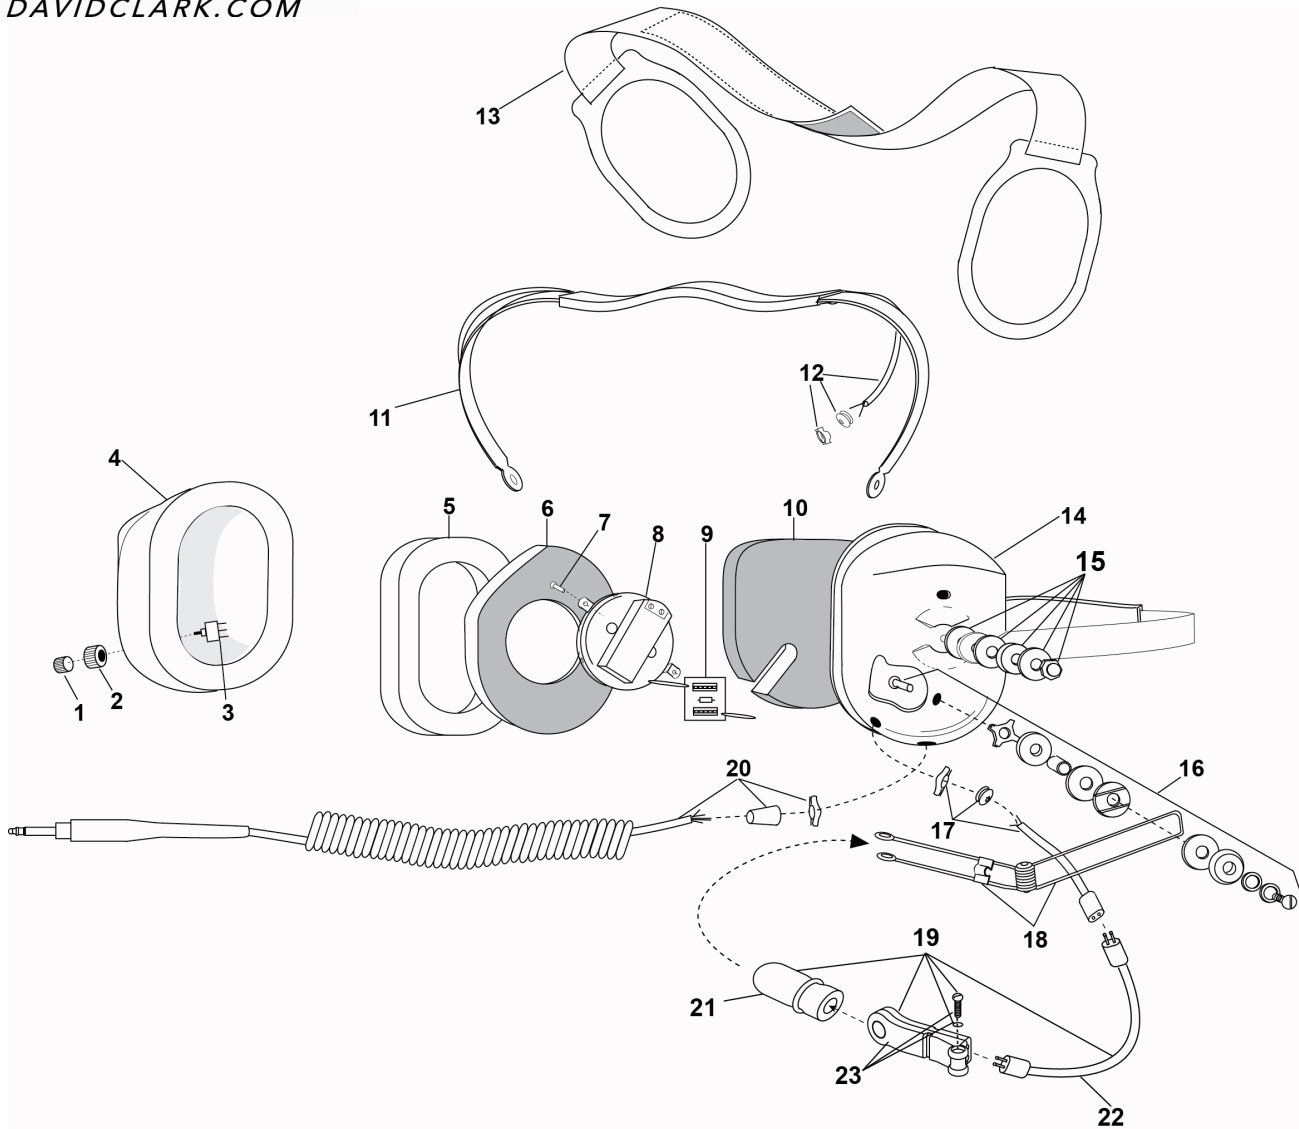