

## C91-20AX Auxiliary Audio Input Cable P/N 40892G-21

The Auxiliary Audio connection is intended for use with line-level devices only. Typical connections include a portable CD/MP3 player's headphone jack or the "Preamp Output" RCA jacks on a car/marine stereo. This cable can also be used to route audio from the Digital Intercom System to another device (such as a camera or recorder). Additionally, this cable can be used to interface to a smart phone.



**IMPORTANT: To connect to the External Speaker terminals of a communications or weather radio that has balanced audio DO NOT use an aux connection. Instead use a radio connection.**

**Failure to observe this warning may result in damage to the radio and/or the 9100 Digital Intercom.**

### Parts/Tools Required

- A U9102 Radio/Aux card installed in the Master Station
- C91-20AX Auxiliary Audio Cable (40892G-21)
  - Includes 3.5mm Female to Left/Right RCA Plugs Adapter
- Wire cutters/Wire strippers
- Soldering iron/Solder
- Heat-shrink tubing
- Wire ties

### Procedure

- Route the C91-20AX Cable between the source and the Master Station. The cable should be routed using under-deck conduits and be as far as possible from radio antenna coax cables and anywhere water may collect. Use wire ties where necessary.
- Connect the cable to Port 3 (Aux Out) or Port 4 (Aux In or smartphone) on the U9102 card in the Master Station. Align red keyways and push. Pull back gently on the connector to ensure it is properly locked.
- **For Portable CD/MP3/Smartphone installation:**
  - Plug 3.5mm male into the device's 3.5mm jack labeled "Line Out" or "Headphones".
  - Adjust device's volume to 75% to start. Make further adjustments if necessary.
- **For Car/Marine Stereo installation:**
  - Locate the "Preamp Output" RCA jacks on the stereo. Some models require an additional adapter from the manufacturer to access these jacks.
  - Connect the supplied 3.5mm to RCA adapter cable to the stereo's output RCA jacks.
  - Connect the C91-20AX cable to the adapter cable's 3.5mm jack.
  - Use a waterproof, outdoor cable/coax sealant to ensure that no moisture can enter the contacts of the RCA plugs and the 3.5mm connections.

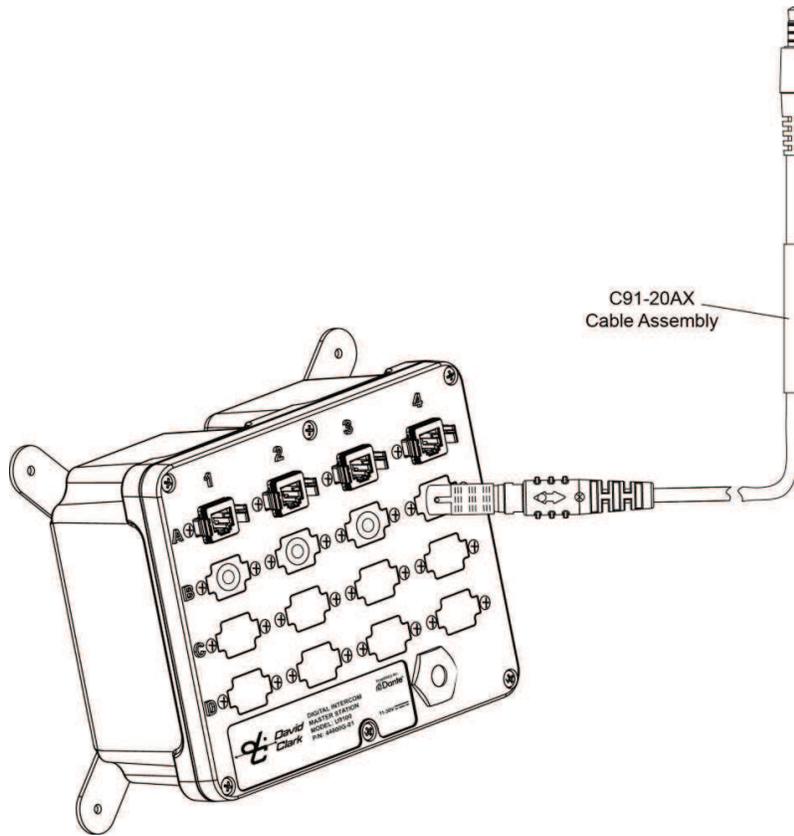


Fig. 1

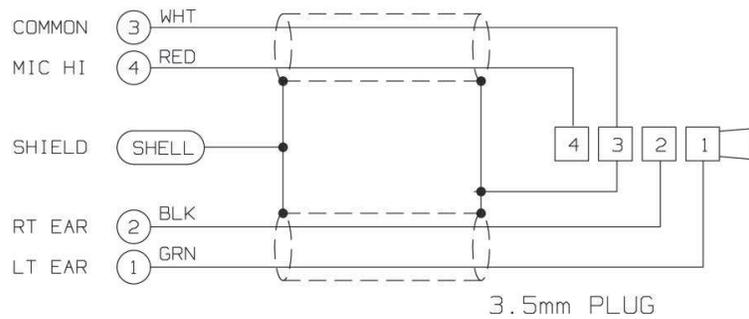
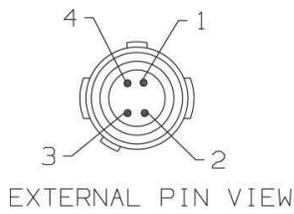


Fig. 2