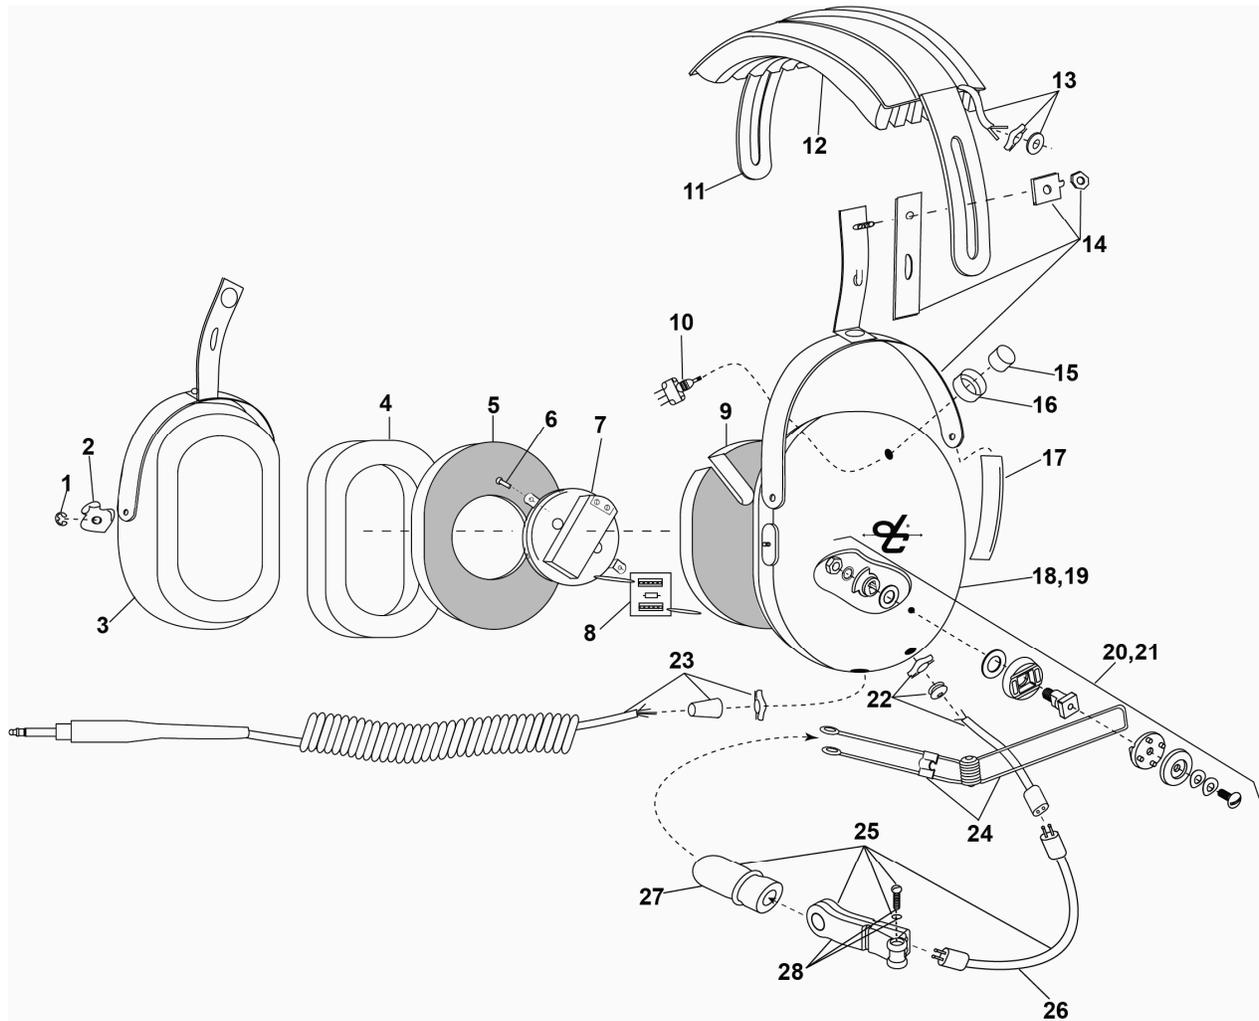


**PARTS LIST
MODEL H3332**


Note: Boom Stop version shown (19,21)

No.	Description	Part No.
1	Retaining Ring (10/pk)	00009M-03
2	Dome Stop	15097P-01
3	Right Dome	11696P-12
4	Earseal (pair)	18316G-02
5	Dome Filter	25629P-03
6	Screws (10/pk)	13180P-03
7	Earphone Assembly	10376G-17
8	PCB Assembly	18289G-13
9	Dome Filter	26475P-02
10	Push Button Switch	09851P-17
11	Headband Spring	25630P-01
12	Headpad Assembly	10133G-41
13	Overhead Cord Assembly	22607G-01
14	Stirrup Assembly	22378G-01

No.	Description	Part No.
15	Switch Cap Kit	41090G-13
16	Switch Guard	13148P-01
17	Heat Shrinkable Tubing (10/pk)	18326G-01
18	Left Dome (Non-Boom Stop)	11696P-28
19	Left Dome (Boom Stop)	11696P-84
20	Boom Guide Kit (Non-Boom Stop)	12840G-01
21	Boom Guide Kit (Boom Stop)	12840G-20
22	Microphone Cord Assy Kit	10405G-05
23	Communication Cord Assy Kit	18028G-34
24	Microphone Boom Assy	12765G-08
25	DC-1A Microphone w/Cord	12948G-14
26	Microphone Cord Assembly	10516G-14
27	Mic Protector	40062G-06
28	DC-1A Microphone	18920G-04

ELECTRICAL SCHEMATIC MODEL H3332

