



**SERIES 9900 WIRELESS INTERCOM SYSTEM**

**STAND-ALONE INTERCOM**

**U9911-BSC**

**PURGING INSTRUCTIONS**



## SERIES 9900 WIRELESS INTERCOM SYSTEM

First, turn off the Belt Station power by pressing the power button on the side of the unit



POWER  
BUTTON



## SERIES 9900 WIRELESS INTERCOM SYSTEM

Next, push and hold the PTT switch on the front of the unit.



PTT BUTTON



## SERIES 9900 WIRELESS INTERCOM SYSTEM

Then, push and hold the power button, powering the unit up, while continuing to hold the PTT switch



## SERIES 9900 WIRELESS INTERCOM SYSTEM



To complete the process, when the LED indicator turns **red**, release the power button...



...then release the PTT switch. The LED indicator will **flash red** For 15 to 20 seconds, followed by a voice prompt, "Connection Deleted."





## **SERIES 9900 WIRELESS INTERCOM SYSTEM**

The Controller Belt Station also allows for a '**full purge**'.

A full purge is a quick method of purging all linked Belt Stations at one time.



## SERIES 9900 WIRELESS INTERCOM SYSTEM



To execute a full purge, first, turn off the Gateway – if not already off - by pressing the power button on the face of the unit.



POWER  
BUTTON



## SERIES 9900 WIRELESS INTERCOM SYSTEM



Next, push and hold the PTT switch on the face of the unit.



PTT  
SWITCH





## SERIES 9900 WIRELESS INTERCOM SYSTEM



Then, push and **hold** the power button until the power is on, indicated by the LED showing as **solid red**, while continuing to hold the PTT switch.



PTT  
SWITCH

POWER  
BUTTON



## SERIES 9900 WIRELESS INTERCOM SYSTEM



Next, release the power button, **while continuing to hold the PTT switch.**



PTT  
SWITCH

POWER  
BUTTON



## SERIES 9900 WIRELESS INTERCOM SYSTEM



Finally, release the PTT button.



PTT  
SWITCH



## **SERIES 9900 WIRELESS INTERCOM SYSTEM**



All previously linked Belt Stations are now purged and ready to link again, when needed, to any 9900 Series Gateway.

