


**PARTS LIST
MODEL H3341**


No.	Description	Part No.
1	Switch Cap Kit	41090G-13
2	Switch Guard	13148P-01
3	Push Button Switch	09851P-17
4	Right Dome	15522P-09
5	Earseal (pair)	18316G-02
6	Filter	25629P-05
7	Screw (10/pk)	00023M-07
8	Earphone Assembly	10376G-17
9	PCB Assembly	18289G-13
10	Filter	11410P-02
11	Spring Assembly	10117G-97
12	Overhead Cord Kit	22607G-11

No.	Description	Part No.
13	Adjustable Strap	10370G-03
14	Left Dome	15522P-07
15	Nut and Washer Kit (10 pk)	12052G-02
16	Boom Guide Kit	12840G-01
17	Microphone Cord Assy Kit	10405G-05
18	Microphone Boom Assy	12765G-04
19	DC-1A Microphone w/Cord	12948G-14
20	Communication Cord Assy Kit	18028G-34
21	Dome Filter (1 each)	24636P-03
22	Mic Protector	40062G-06
23	Microphone Cord Assembly	10516G-14
24	DC-1A Microphone	18920G-04

ELECTRICAL SCHEMATIC
MODEL H3341

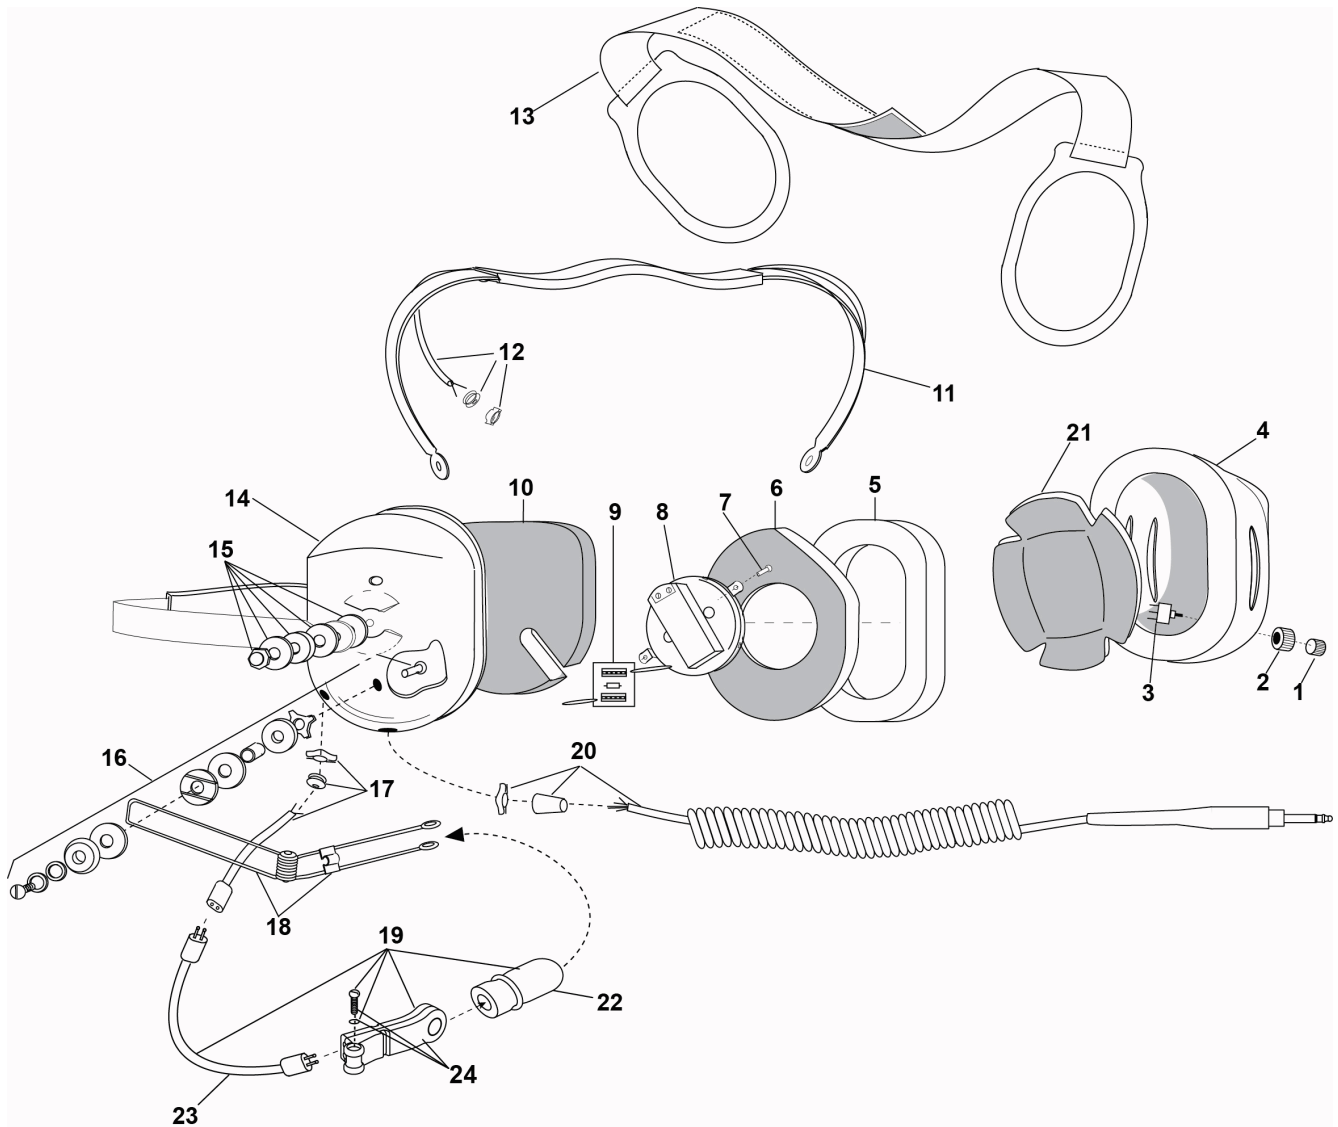