



No.	Description	Part No.
1	Knob	09347P-15
2	Shaft Seal Nut	13145P-05
3	Volume Control	09349P-30
4	Rotary Switch	09500P-18
5	Gasket	13176P-03
6	Connector (5 Socket)	00121M-01
7	Screws and Nuts (4 ea.)	18900G-01
8	Cap (and nylon cord)	13238P-01
9	Connector (6 pin)	00084M-09
10	Light Emitting Diode (LED)	13202P-18
11	Push-To-Talk Switch	09851P-28

No.	Description	Part No.
12	Neoprene Washer (10/pk)	23100G-07
13	Guard, Push Button	26553P-01
14	Connector (4 Socket)	00084M-01
15	Jack Cover (with Nut)	09518P-04
16	Headset Jack	09228P-03
17	Mounting Kit	09865P-03
18	Grommet (4 ea.)	18900G-08
19	Connector (6 Socket)	00084M-05
20	Box	26497P-31
21	Flat Washer (10/pk)	23100G-08