


**PARTS LIST**  
**MODEL H9842SK**

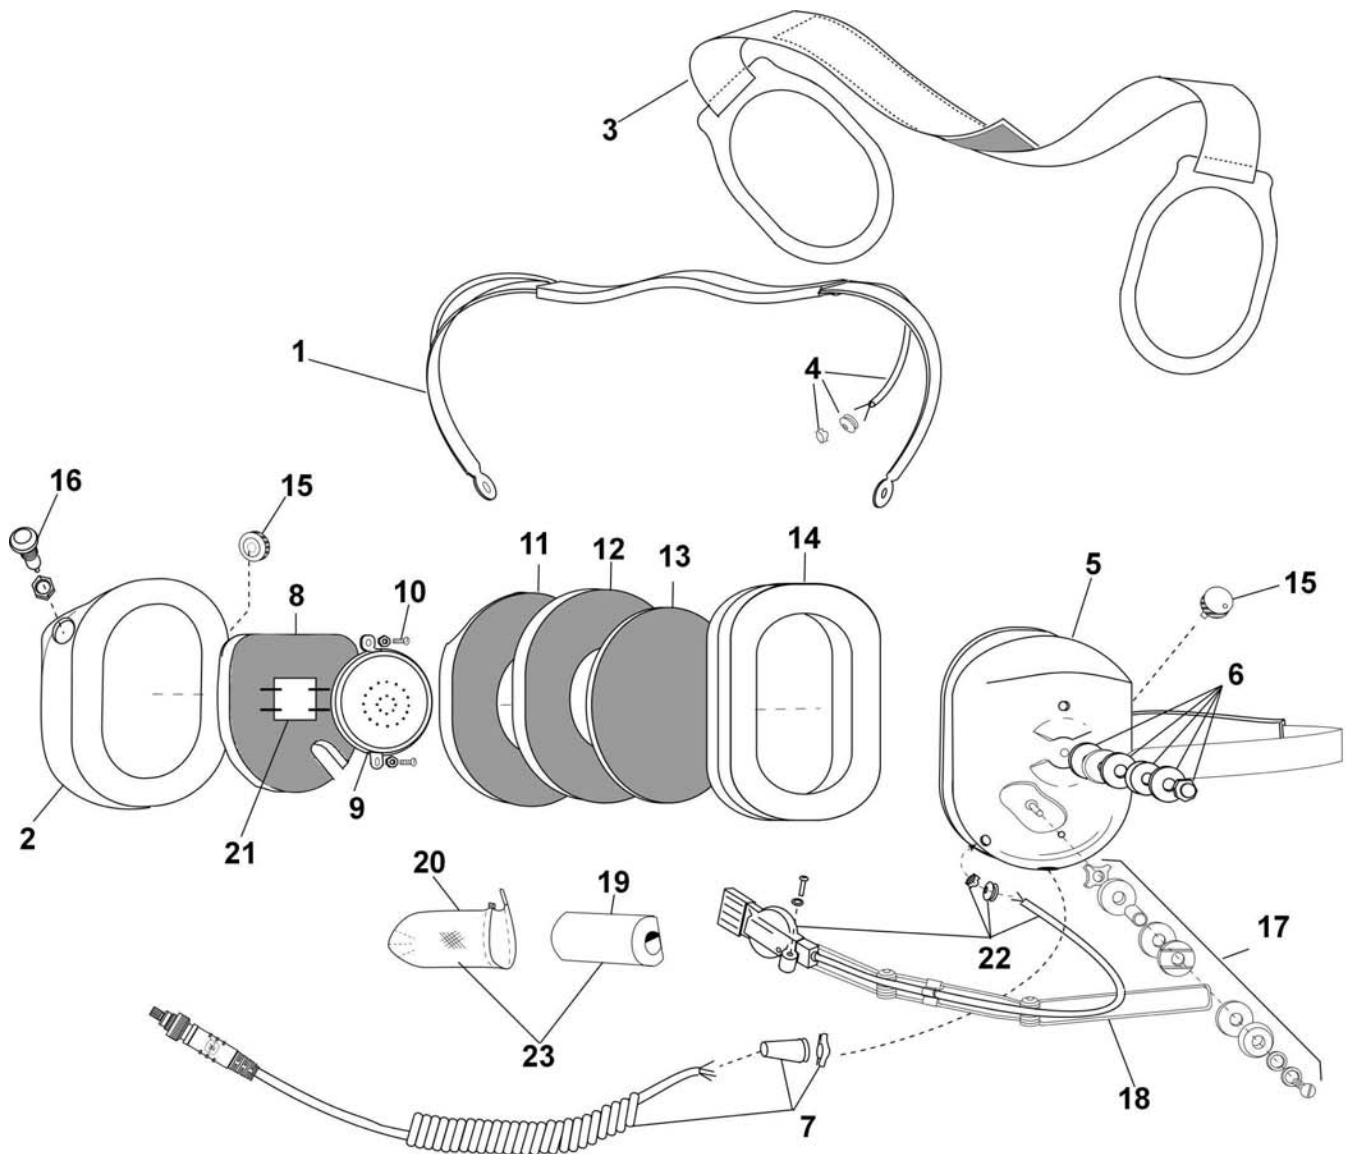

No.	Description	Part No.
1	Spring Assembly	40623G-30
2	Dome, Right	15522P-33
3	Support Assembly	10370G-03
4	Overhead Cord Assembly	22607G-13
5	Dome, Left (mic side)	15522P-36
6	Nut and Washer Kit (10 pk)	12052G-04
7	Comm Cord Assy Kit	40599G-72
8	Dome Filter	11410P-02
9	Earphone Assembly	10376G-46
10	Screw (10/pk)	00023M-07
11	Dome Filter	25629P-05
12	Dome Filter	14096P-05

No.	Description	Part No.
13	Filter	14096P-09
14	Undercut Gel Earseal (pair)	40863G-02
15	Volume Control	09349P-40
16	Switch, Mic, Momentary	26619P-19
17	Boom Guide Kit	12840G-18
18	Microphone Boom Assy	12765G-09
19	Screen, Wind, Mic	14863P-01
20	Cover, Windscreen	18792G-02
21	PCB Assy, Mic AMP	40415G-54
22	Mic, M87 IMM. PRF. w/Cord	40910G-01
23	Kit, Mic Cover/Windscreen	40688G-94

# ELECTRICAL SCHEMATIC MODEL H9842SK

