



Gasket Mounting Kit

P/N 44004G-03


Components:

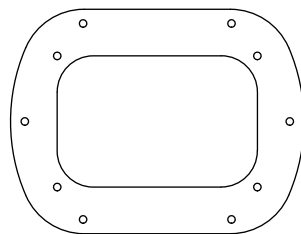

Gasket with VHB Tape

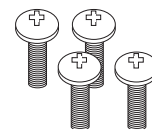


4 ea. 8-32 x 3/4"
Sealing Screws
with Nylon Patch

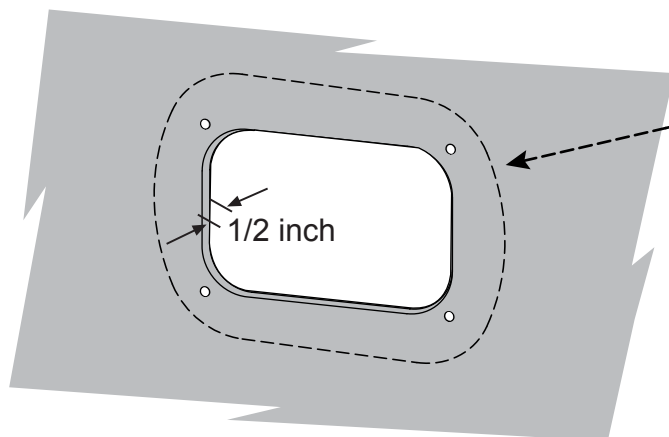


1. Using template attached, cut cavity and screw holes into panel.


Note: This kit will accommodate a maximum 1/2 inch thick bulkhead dimension.

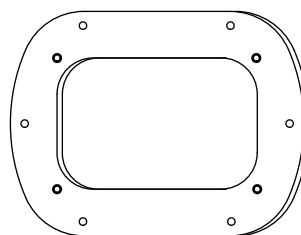

2. Remove VHB Tape from gasket and adhere to the inside surface of panel. Make sure to align mounting holes.

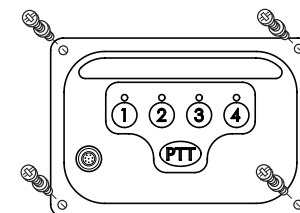

3. Remove all 4 cover screws and discard.

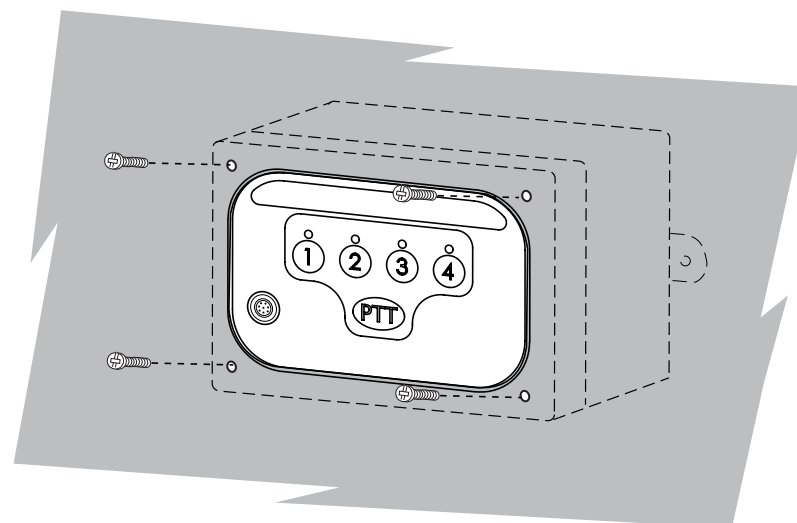

4. Place module into cavity of the cut panel. Fasten with 4 each 8-32 sealing screws provided.

Note: Tighten screws to 6 in. - lbf.

Template

