


PARTS LIST
DC PRO-XP

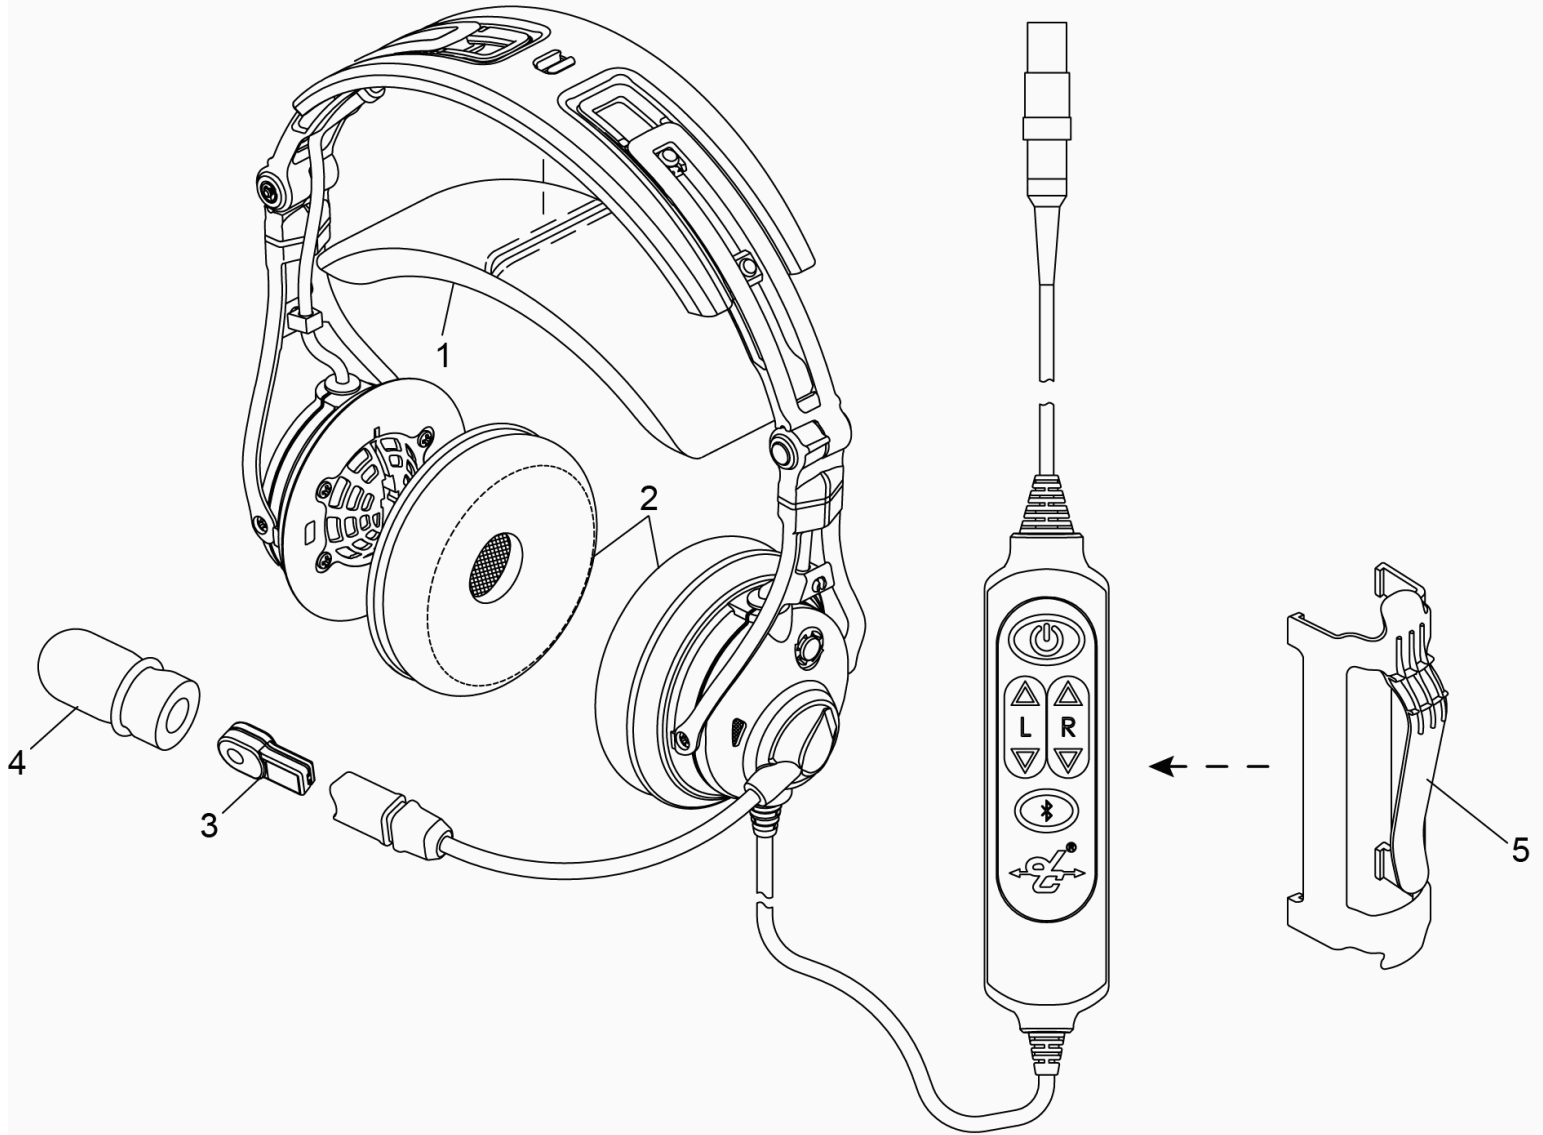

No.	Description	Part No.
1	Headpad	15977P-04
2	Earseal (pair)	15976P-03
3	Microphone M-5B	09168P-85

No.	Description	Part No.
4	Mic Protector w/ O-Ring	40062G-02
5	Belt Clip	41068G-03


DC PRO-XP

Usage Instructions


The suspension system on the DC PRO-XP (43100G-02) is designed for a simple and comfortable fit. Proper fit is necessary for maximum effectiveness. The headset should be worn so that the headpad lightly touches the top of the head. Adjust the sliding assembly on each side as necessary, keeping slide positions equal on either side. For proper microphone placement, adjust boom up/down and in/out by rotating and flexing the boom as necessary. Ideal microphone placement is 1/8" from the lips as this will provide maximum intelligibility and ambient noise rejection.

Replaceable Parts Removal/Installation

- M-5B Microphone (09168P-85) and mic protector (40062G-02)
 - To remove: Gently pull off foam cover. Grasp microphone firmly and pull straight out.
 - To install: Align keyway on microphone with keyway on boom. "TALK" should be inward towards the user's face. Push until microphone snaps into place.
- Earseals (15976P-03)
 - To remove: Gently pull off.
 - To install: Stretch earseal over lip on dome until completely seated on dome.
- Headpad (15977P-04)
 - To remove: Gently pull off.
 - To install: Align headpad with headband assembly and push all around the perimeter to engage hook-and-loop fasteners.
- Belt Clip (41068G-03)
 - To remove: After unlatching both clips as shown, twist belt clip to completely remove.
 - To install: Click in all four locking tabs of belt clip into circled groove areas of the inline.

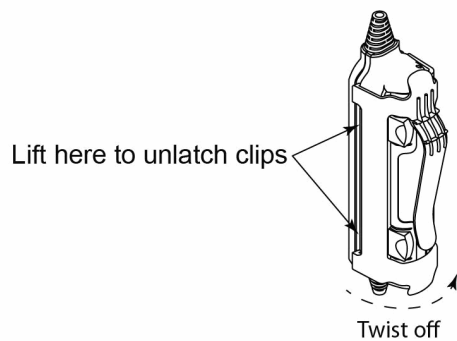

Removal of Belt Clip

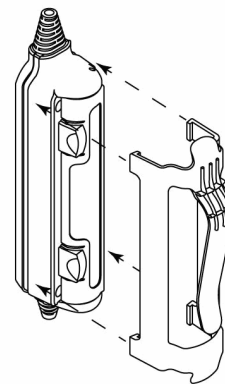

Installation of Belt Clip